


L I E M K E



Instruction LIEMKE app

- english -

January 2024

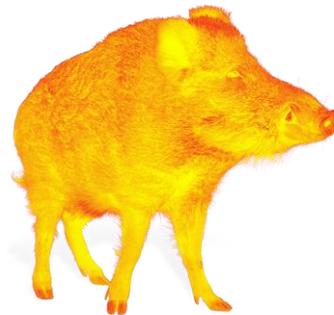

INNOVATION. QUALITÄT. SERVICE.
by LIEMKE




Information for initial or reinstallation of the app


Please only connect your thermal imaging device to your mobile device via wifi after you have completed the intro and selected the device model. You will find instructions on how to connect on the upcoming screen of the live stream (p. 6).

1. Intro

When you start the app for the first time, an intro appears with some information about the possibilities of the app.

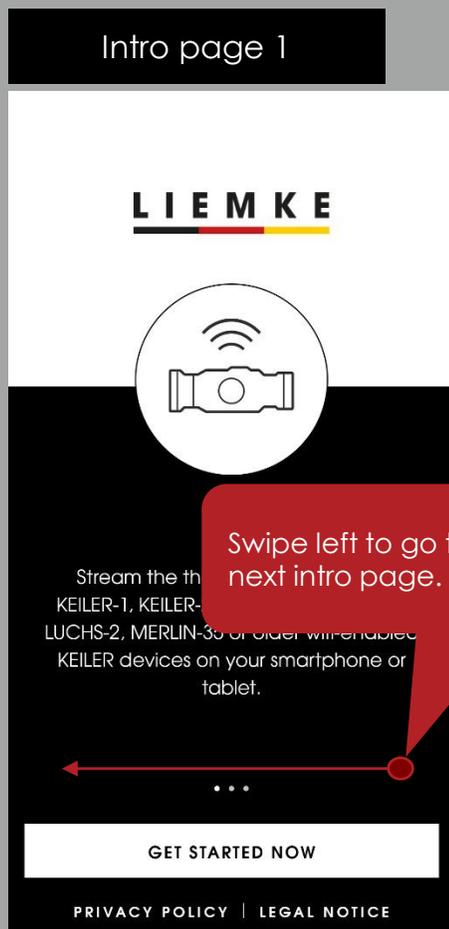

Swipe left to go to the next intro page.

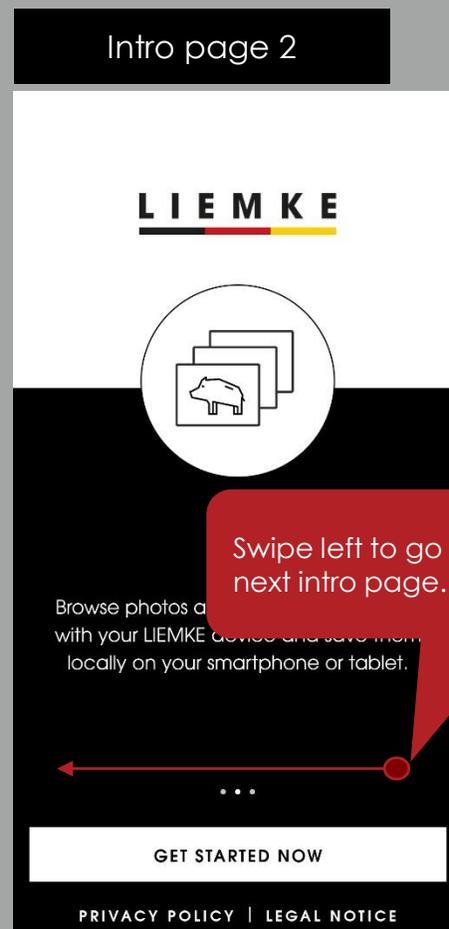


Swipe left to go to the next intro page.



Tap on "GET STARTED NOW" to finish the intro.

1. Intro


Already in the intro, you have the possibility to access the privacy policy as well as the legal notice.

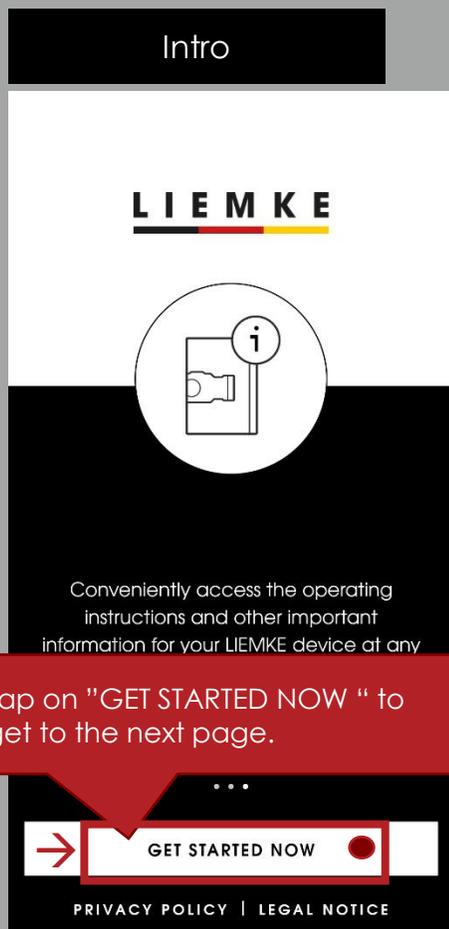

Tap on "GET STARTED NOW " to get to the next page.



Confirm to get to the next page.

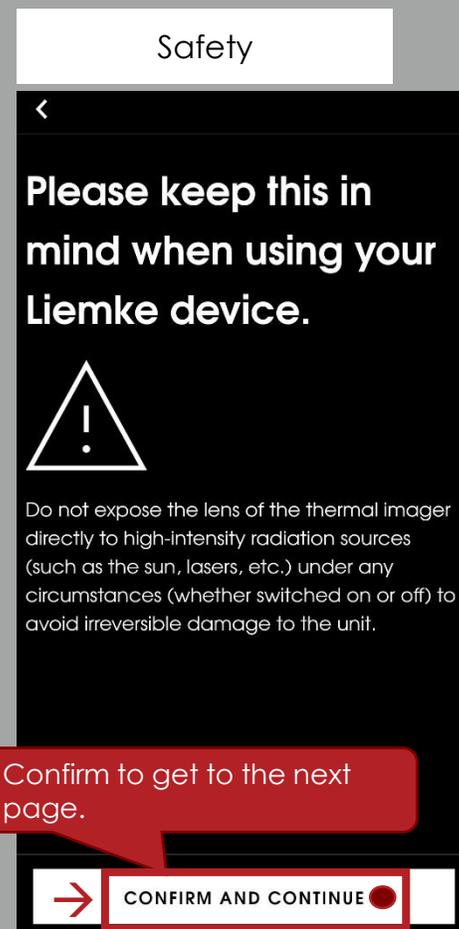

Confirm to get to the next page.



Alternatively, you can also access the privacy notice or the legal notice during the intro.

2. Device selection

The device selection lists all model series that can be used with the LIEMKE app.

Device selection

Which device do you want to use with the app?

- LIEMKE OLDER KEILER MODEL
- LIEMKE KEILER**
- LIEMKE LUCHS
- LIEMKE MERLIN-35

Callouts:

- Select your thermal imaging device from the list:
- *older wifi enabled KEILER models
- *KEILER-1, -2 or -25.1
- *LUCHS-1 or -2
- *MERLIN-35

Example: KEILER

Which device do you want to use with the app?

- LIEMKE OLDER KEILER MODEL
- LIEMKE KEILER**
- LIEMKE LUCHS
- LIEMKE MERLIN-35

Tap "CONTINUE" to confirm your selection and move to the next page.

Setup completed


Great, you have completed the set-up!

If you want to use the app with another LIEMKE device, you can do so at any time. To do this, change the device in the settings under the menu item "More".

Tap "CONTINUE" to get to the next page.

3. Stream


After setup is completed, the live stream opens. Connect your thermal imaging device to the app and watch the live stream of your device.

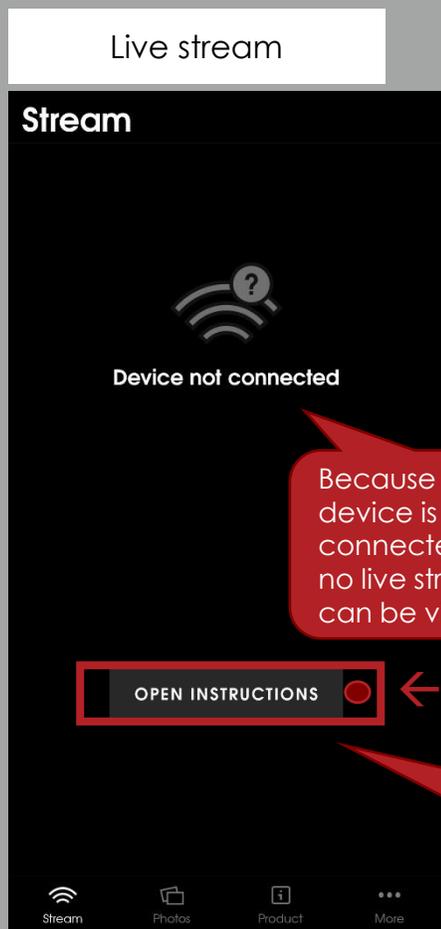

Because no device is connected yet, no live stream can be viewed.

Open the instructions for connecting the app to your device.

Follow the instructions to connect the app to your device.

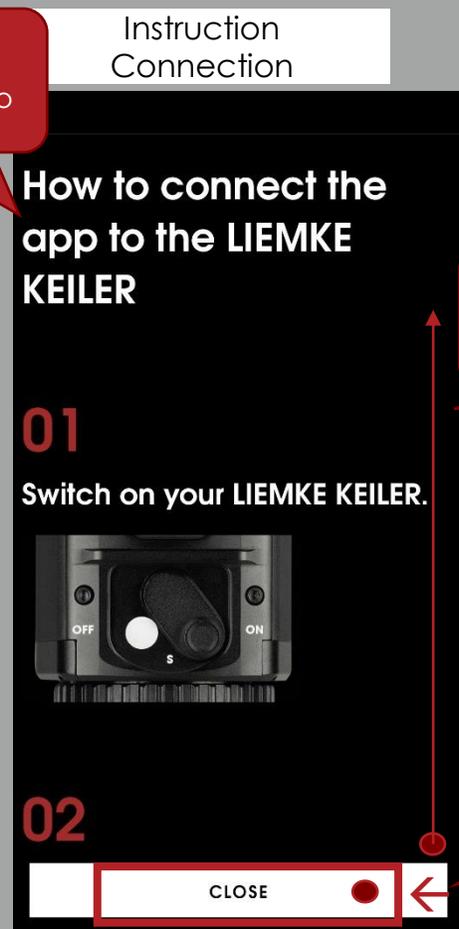

Swipe up to view the complete instructions.


Tap "CLOSE" to return to the live stream.



If the connection is successful, you see the live stream of your device.

3. Stream

After successfully connecting your thermal imaging device to the app, you will be able to view the live stream. You can take photos and record videos via the app.

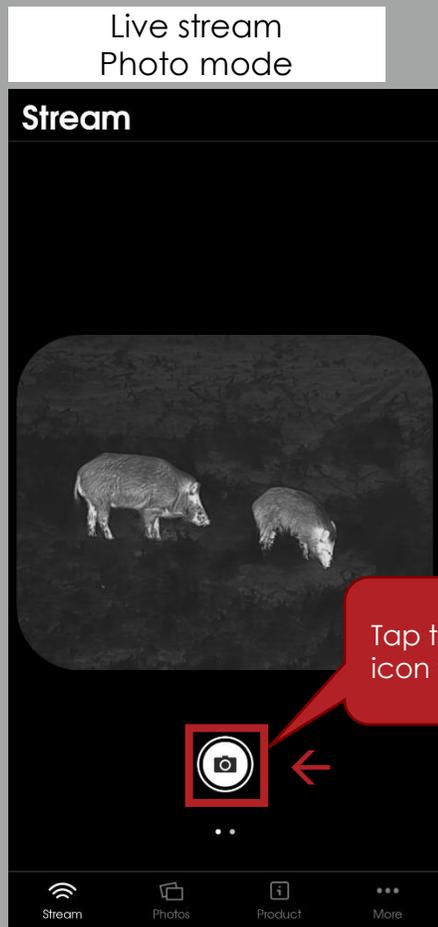


4. Photos

You can view the photos & videos stored on your thermal imaging device as well as the new photos & videos taken via the app.



4. Photos

In the photo galleries, you can take a closer look at each photo, replay videos, save the recordings on your mobile device or delete the recording.

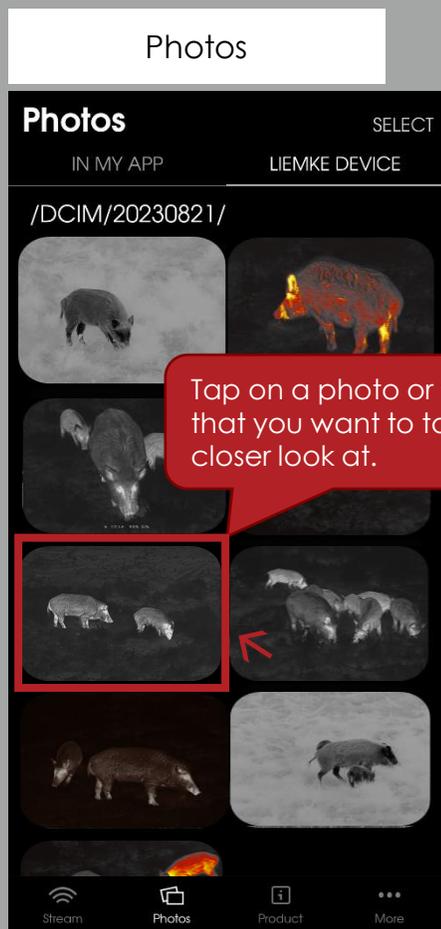

Tap on a photo or video that you want to take a closer look at.




See here the date, time and device of the recording.

Tap the back icon to return to the photo gallery.

Save the selected recording on your mobile device or delete the recording.

Save.

Delete.

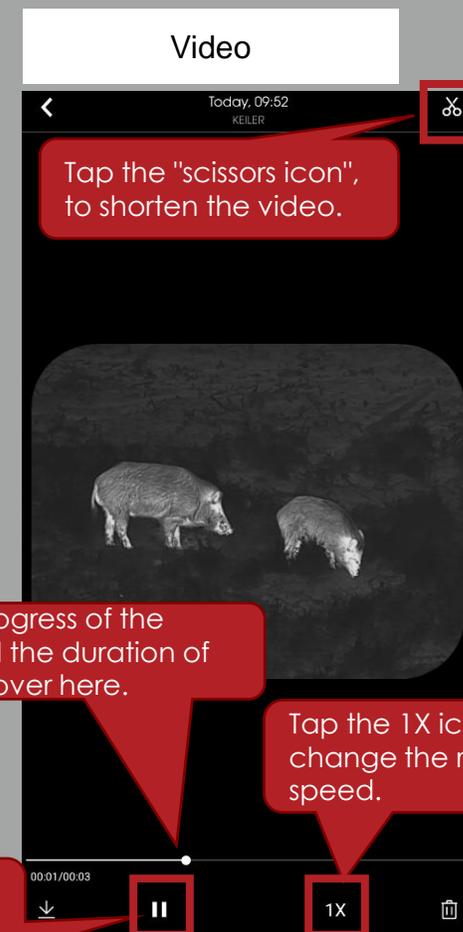

Tap the "scissors icon", to shorten the video.

See the progress of the replay and the duration of the video over here.

Tap the "pause symbol", to pause the replay.

Tap the 1X icon to change the replay speed.

4. Photos

In the photo galleries, you have the option of selecting multiple photos & videos at the same time.



Tap on all the photos & videos you want to select.



5. Product

You can view all important information about your thermal imaging device in the app. Please note that this requires an active internet connection on your mobile device (wifi or mobile data). The information of the model selected during the last active internet connection can still be accessed offline.




Tap on "Product" to go to the overview of product information.



Swipe up to view more product information.

Tap on the product information you want to view (for example, the technical data of your LIEMKE device).

Tapping the "back icon" always takes you back to the previous page.

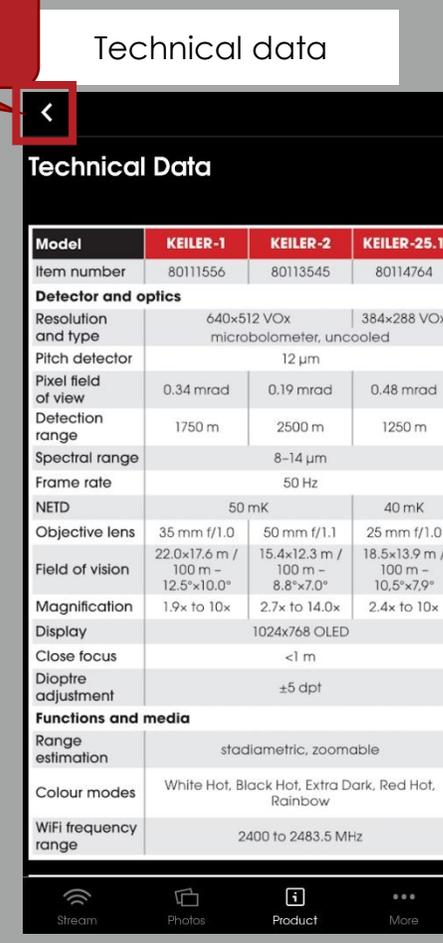


6. More

In the app, you can adjust various settings, access the contact options, the legal notice and the privacy policy.




Tap on "More", to go to the menu items: Settings, Contact & Service, Legal Notice and Privacy Policy.

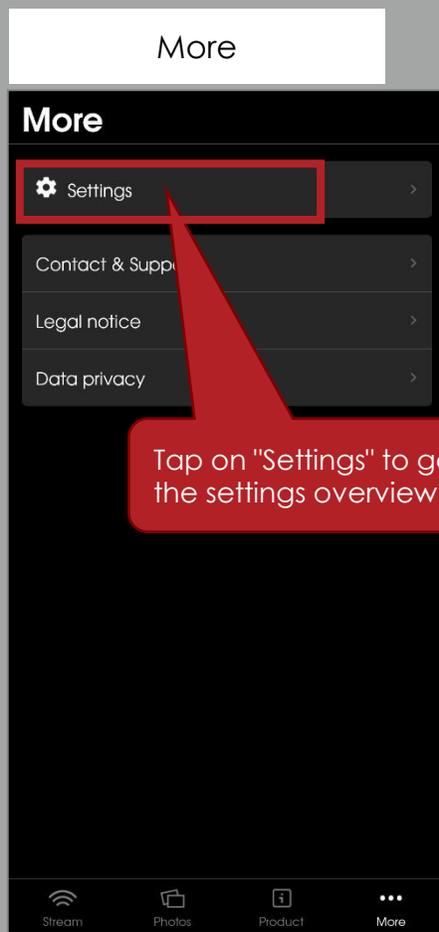

Tap on "Settings" to go to the settings overview.

This shows you the date of the last connection of the app with your device.

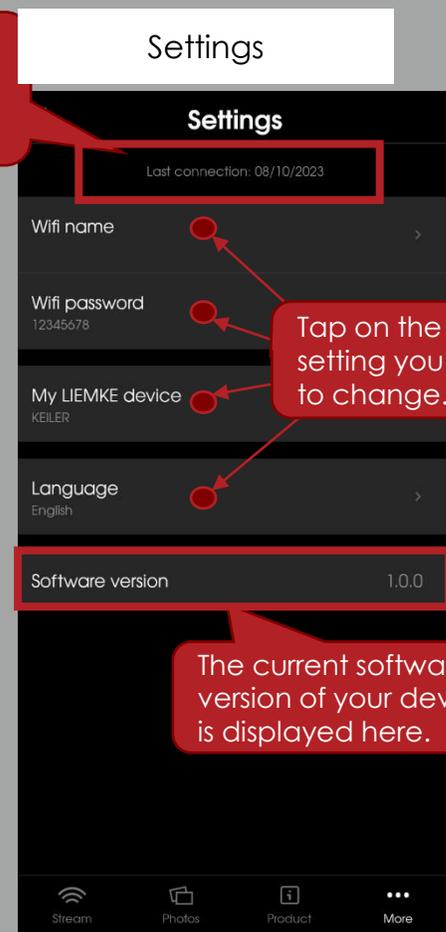


Tap on the setting you want to change.


The current software version of your device is displayed here.

6. More

In the menu item „Settings“ you are able to change the wifi name and the wifi password of your thermal imaging device. Please note that the change to the wifi name or password will only be visible after restarting your device (switching it off and on).

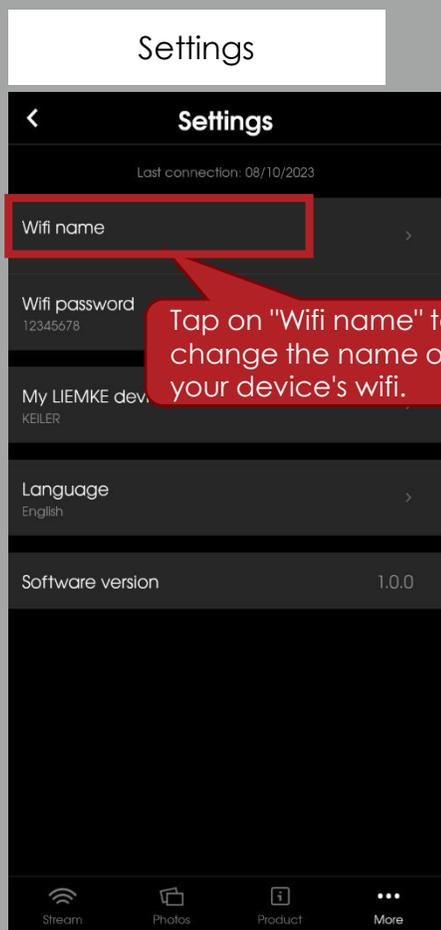


Tap on "Wifi name" to change the name of your device's wifi.

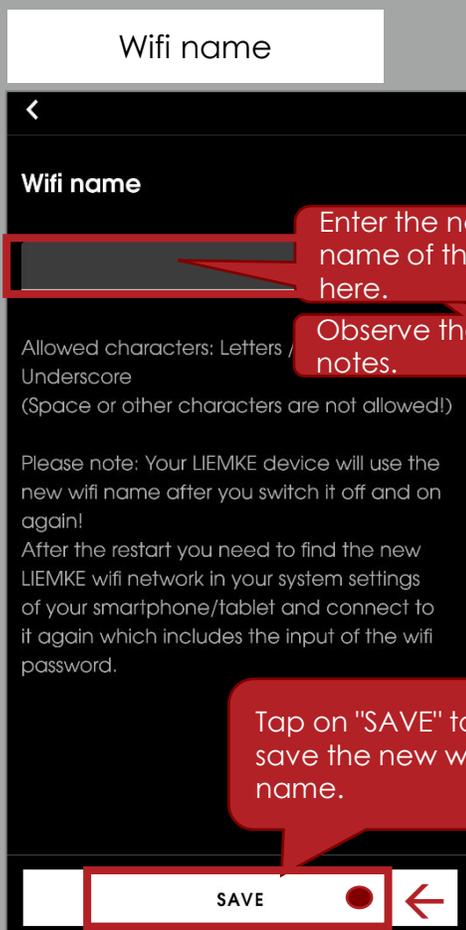


Enter the new name of the wifi here.

Observe the notes.

Tap on "SAVE" to save the new wifi name.

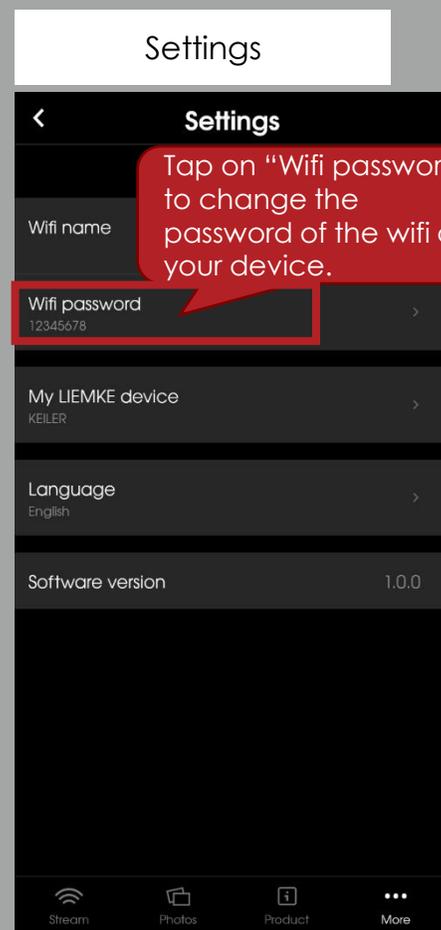

Tap on "Wifi password" to change the password of the wifi of your device.

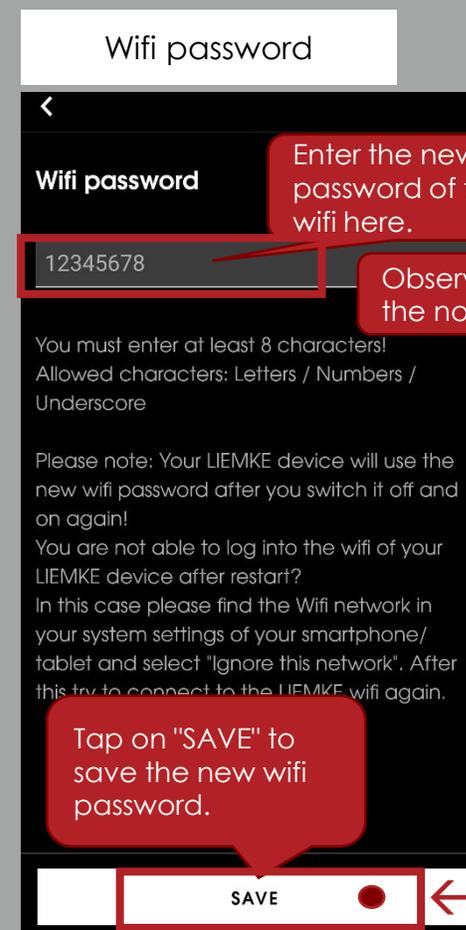


Enter the new password of the wifi here.

Observe the notes.

Tap on "SAVE" to save the new wifi password.

6. More

In the menu item „Settings“ you can change the device selection and the language.

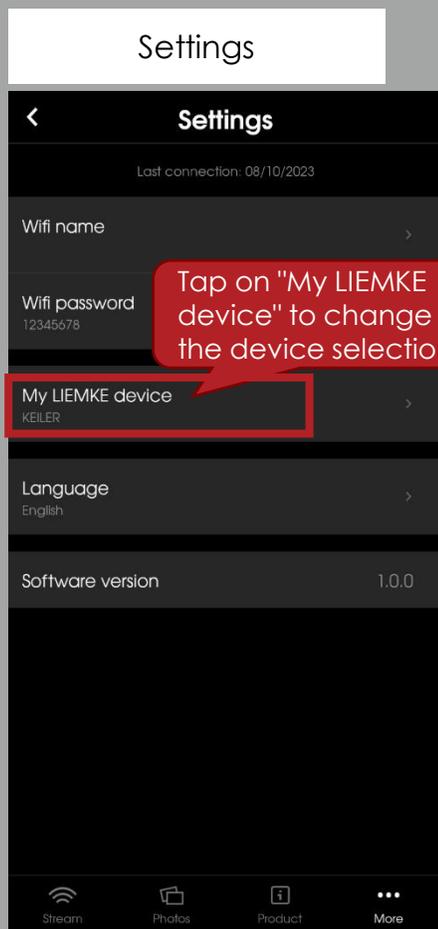


Tap on "My LIEMKE device" to change the device selection.




Here you can change your device selection.

Select the device with which you want to use the app.

Tap on "SAVE" to save the new device selection.

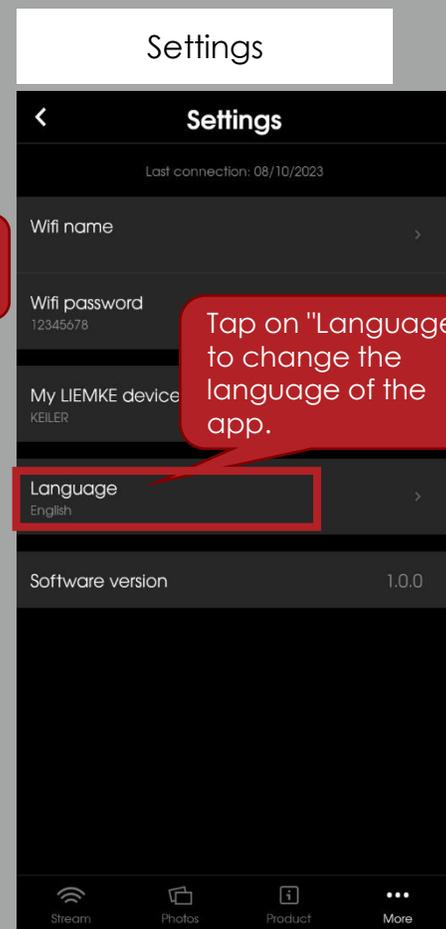

Tap on "Language" to change the language of the app.


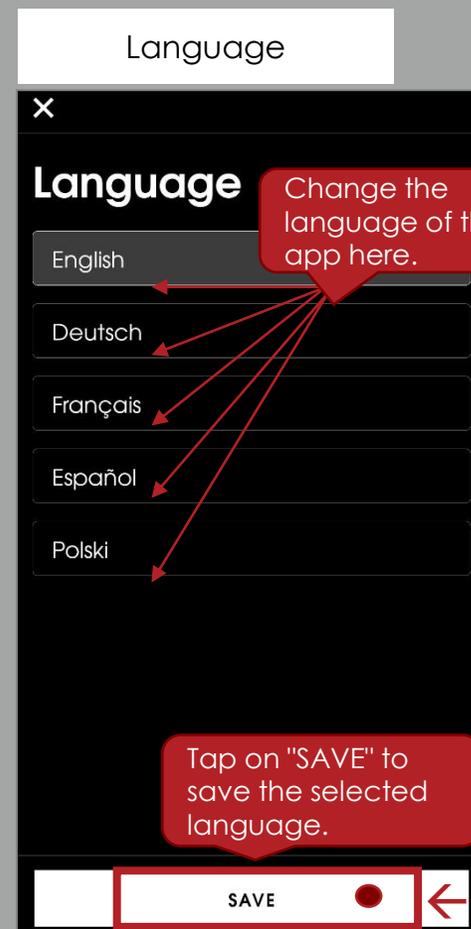


Change the language of the app here.


Tap on "SAVE" to save the selected language.

6. More

Under „More“, you can access the options in addition to the settings.



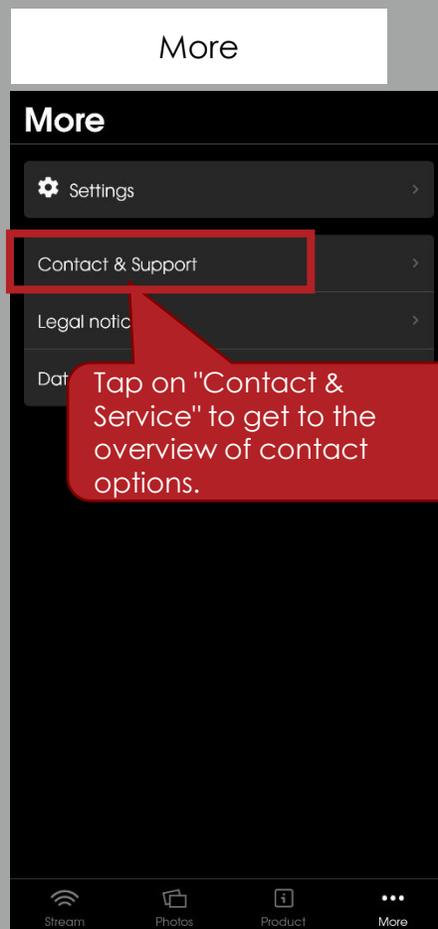
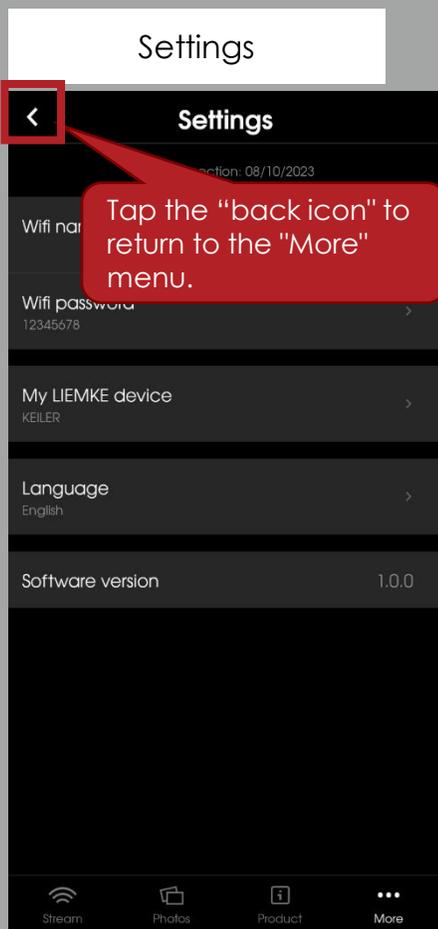


Here you can choose between three contact options.

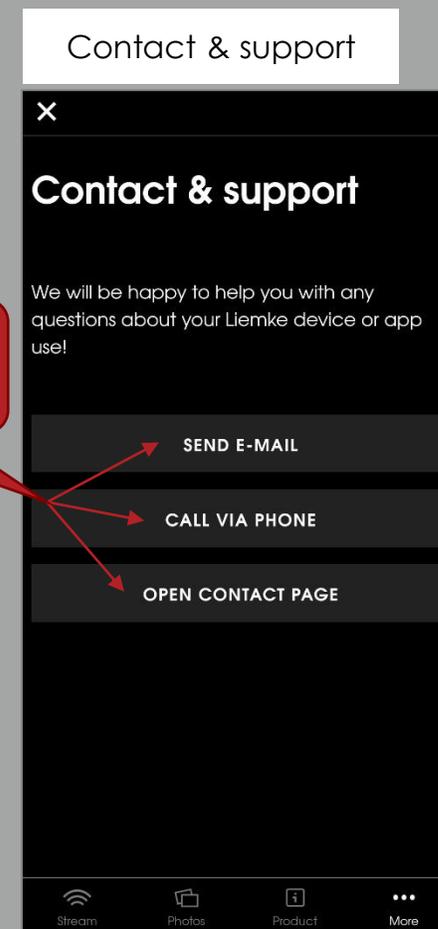

6. More

Under „More“ you can also access the legal notice and the data privacy.

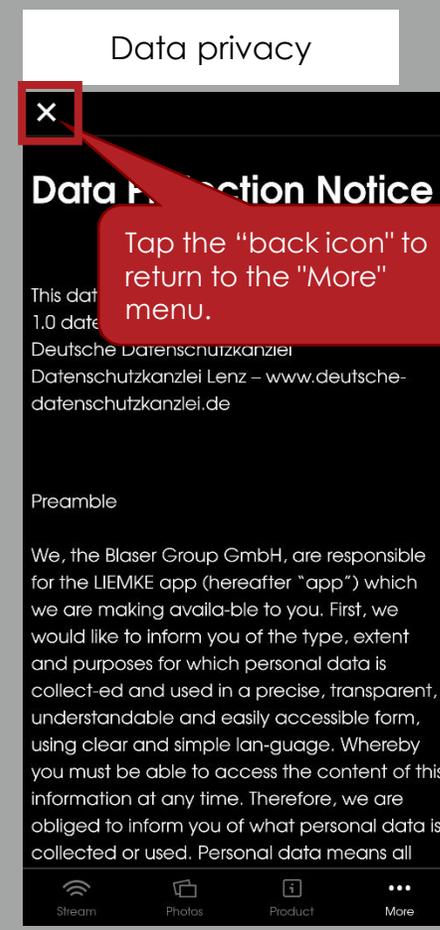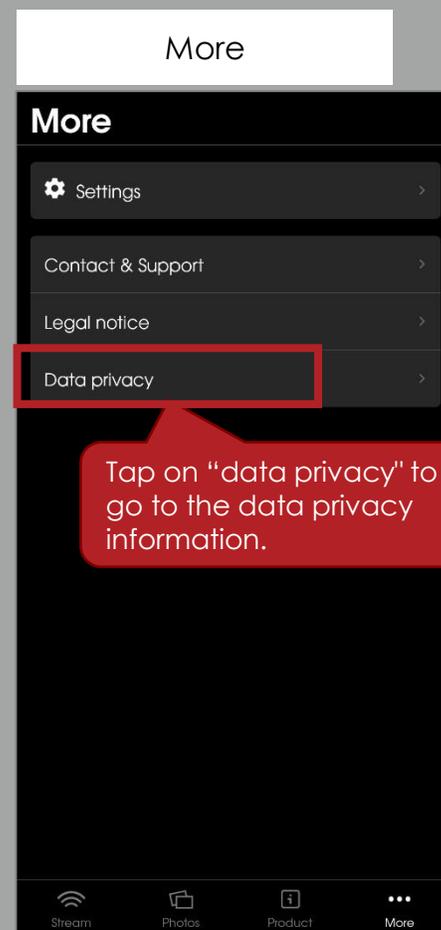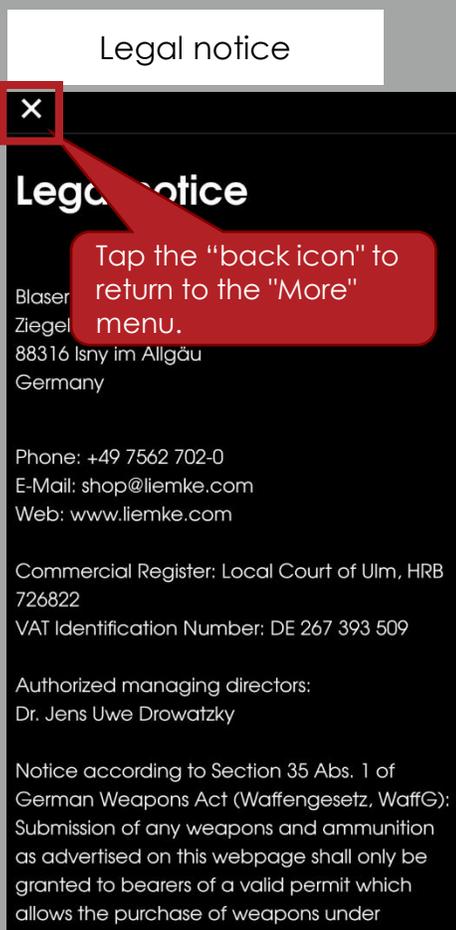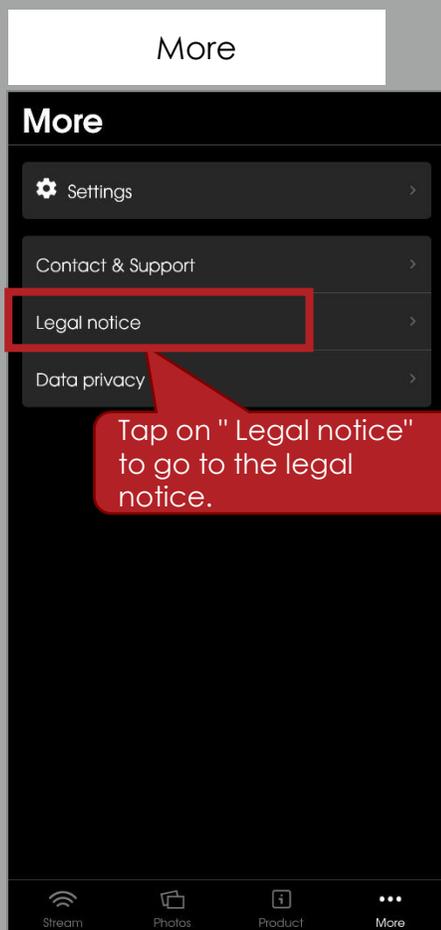


More information

New pull-down function: The loading process for new recordings can be started immediately without changing the menu.



After recording new photos & videos, you can start the pull-down loading function by swiping/dragging from top to bottom.

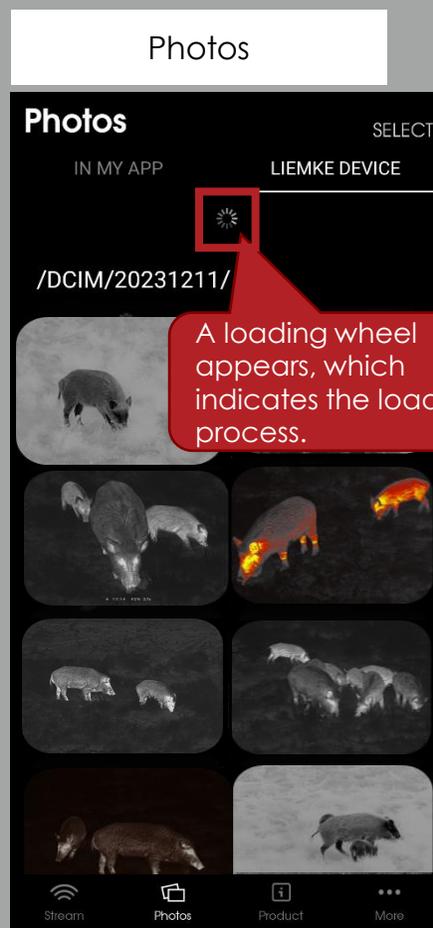

A loading wheel appears, which indicates the loading process.



Once the loading process is complete, your new recordings are displayed and are available for detailed view, download or deletion.



Once the loading process is complete, your new recordings are displayed and are available for detailed view, download or deletion.

LIEMKE



Blaser Group GmbH
Ziegelstadel 1
D-88316 Isny

+49 7562 702-0
shop@liemke.com
www.liemke.com

Contact technical service

Blaser Group Wetzlar GmbH & Co. KG
Liemke Service
Wilhelm-Loh-Straße 1
D-35578 Wetzlar

+49 (0) 6441 56691 700
service.bgw@blaser-group.com



INNOVATION. QUALITÄT. SERVICE.
by LIEMKE 